



- Imported MITSUBISHI acrylic materials
- Excellent thermal conductive T2 copper plate
- Jet type micro channel structure
- active backplate
- Large channel design, optimised flow



0.5 mm



screw thread

G1/4′



Decorative pattern Diamond cut

T2/Cu-ETP Copper

SAFETY AND WARRANTY INFORMATION

Before you start using this product, please follow these guidelines:

- Please carefully read the complete manual before beginning with the installation process.
- No liability is accepted for installation errors.
- Only use plastic, copper or brass components in the circuit. The use of other materials can lead to corrosion and other damage to the waterblock.
- Before mounting, please check the compatibility of the cooler with your GPU by comparing the PCB on page 2 with your GPU.
- All Bykski coolers are approved for use with "Aquacomputer DP-Ultra" liquid only. The use of other fluids occurs at the user's own risk.
- Bykski GPU coolers must only be cleaned with distilled water, the use of other cleaning agents may damage the cooler! Never use cleaning agents containing alcohol or acid, this causes the destruction of the acrylic components and may attack the nickel plating!
- Tighten the screws and fittings carefully and firmly. Never use brute force.
- Make sure to thoroughly bleed air out of your water block, otherwise the cooling capacity may be limited.

TABLE OF CONTENT

COMPATIBILITY	/	2
BOX CONTENTS	3	3
PREPARATION	OF THE GRAPHICS CARD	4
INSTALLATION	OF THE WASHERS	5
INSTALLATION	OF THE BLOCK	6
INSTALLATION	OF THE BACKPLATE	7
INSTALLATION	OF THE TERMINAL	8
SUPPORT AND	SERVICE	9
IMPRINT		10

NDDDING www.ezmoding.com


COMPATIBILITY

Before installing the waterblock, please ensure the compatibility.

Use our configurator: <u>https://ezmodding.com/en</u>


German Engli:	sh <u>SEARCH</u>		٩	₩ 0,00 €	≜ Login
CASES 🗸 🛛 FAN COMPL	ETE SOLUTIONS 🗸 FITTINGS 🗸 W	ATER BLOCKS 🗸 RESERVOIRS 🗸 SENSORS	RADIATORS 🗸 PUMPS	TOOLS/ACCESSORIES 🗸	
	Free	shipping to Germany from 150€, EU from 250€			
		Find the right GPU waterblock			
Select your GPU and find the right water blo ↓ Brand	ck directly. Not all are available through th ↓ Model series	s search yet, but we are constantly expanding it.			
PLEASE SELECT BRAND	PLEASE SELECT "BRAND" FIR		ERIES" FIRST! 👻 SI	HOW MATCHING ARTICLES	
		USTROGIS -7-			


BOX CONTENTS

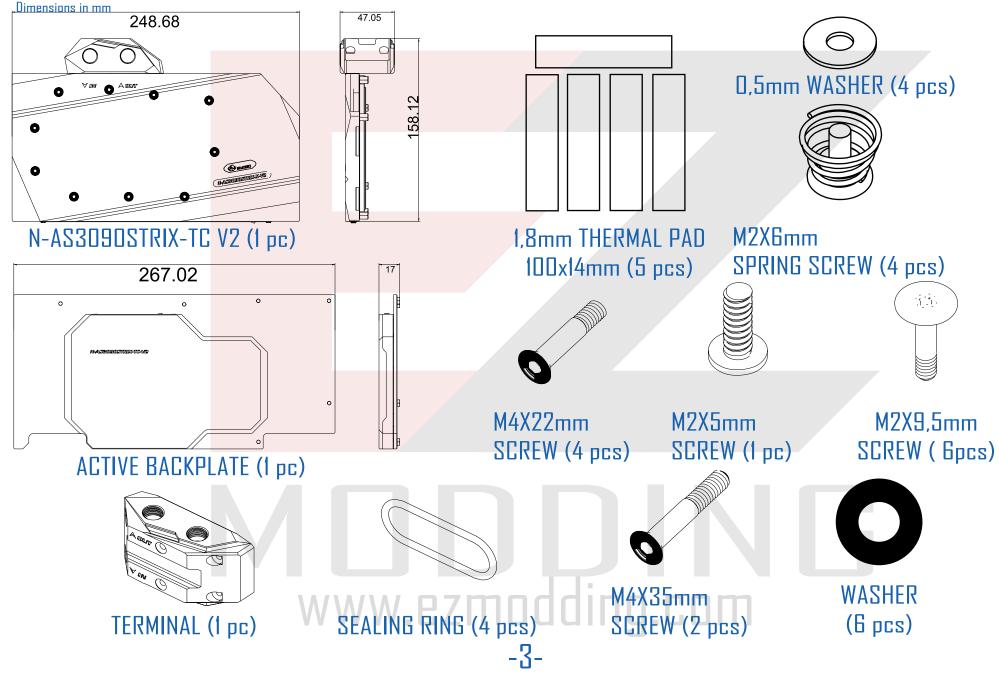

PREPARATION OF THE GRAPHICS CARD


- 1. Remove the stock cooler.
- 2. Wipe off the thermal paste of the components using a nonabrasive cloth and remove the original thermal pads.
- 3. Check the position and number of screws on the block and test if the block fits your graphics card.
- 4. Cut the enclosed thermal pads to the right size for the front- and the backside of the graphics card (grey marked spaces on fig. 2).
- 5. Apply the thermal paste in a **thin and even** layer on the entire surface GPU chip (grey area on fig. 2) and the thermal pads to the indicated posistions (yellow area on fig. 2).

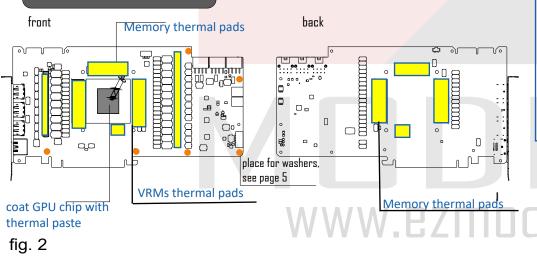

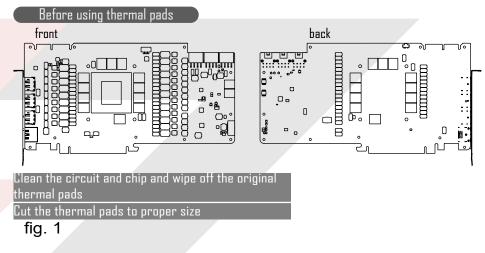



INSTALLATION OF THE WASHERS

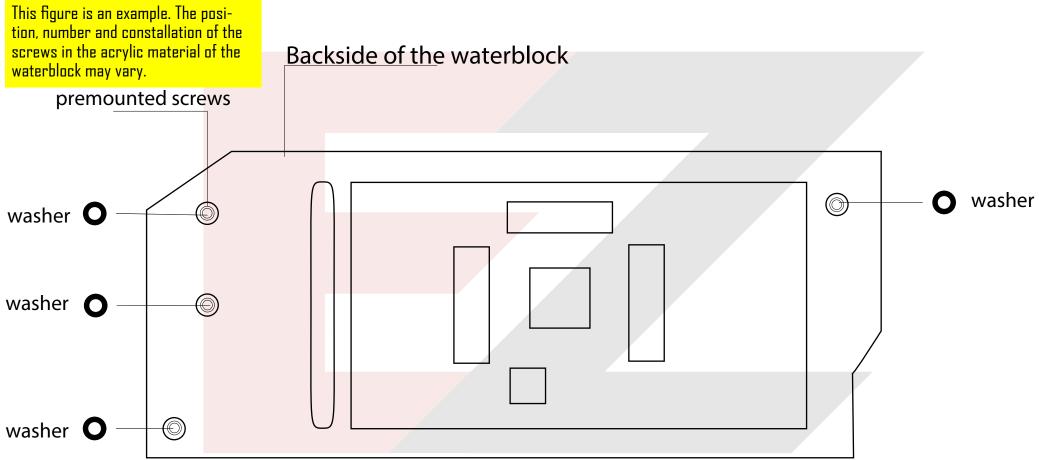


The washers belong on the backside of the waterblock. Put them on the premounted screws in the acrylic material. They ensure the right space between the waterblock and the graphics card (marked orange on fig. 2 on page 4)

www.ezmoddinq.co

-5-


INSTALLATION OF THE BLOCK

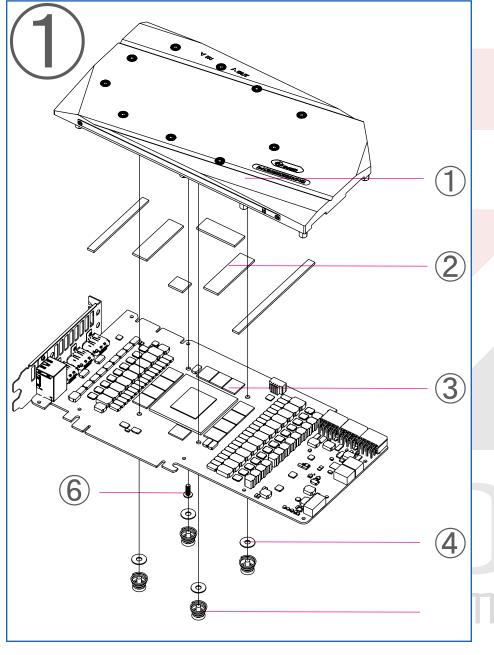


If you notice that the block and the graphics PCB do not fit, do not force the block into place, it could cause damage. Contact a technician (<u>support@ezmodding.com</u>).

Step 1:

- Carefully place the PCB of the graphics card on top of the block (1).
- Attach the block (1) to the graphics PCB and align the washer (4), the M2X6mm spring screws (5) and the M2X5mm screw (6) with the screw holes of the graphics card and tighten it carefully.

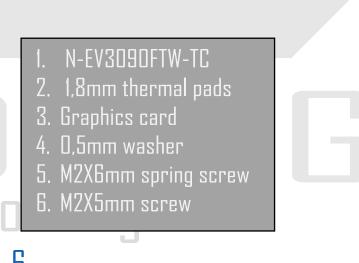

INSTALLATION OF THE BACKPLATE

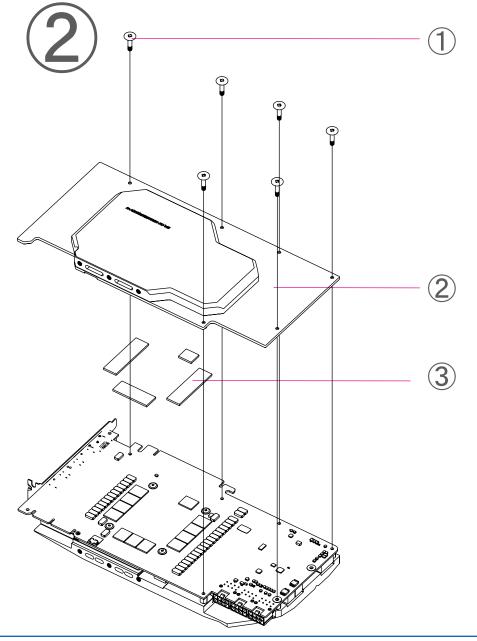

Step 2:


Place the **backplate** (2) **on the back** of the graphics card and secure it **carefully** with the screws (1) in the corresponding position of the screw holes.

- 1. M2X9 5mm aluminium screws
- 2. Copper back plate with waterway
- 3. 1,8mm thermal pads

odding.com

-7-

INSTALLATION OF THE TERMINAL

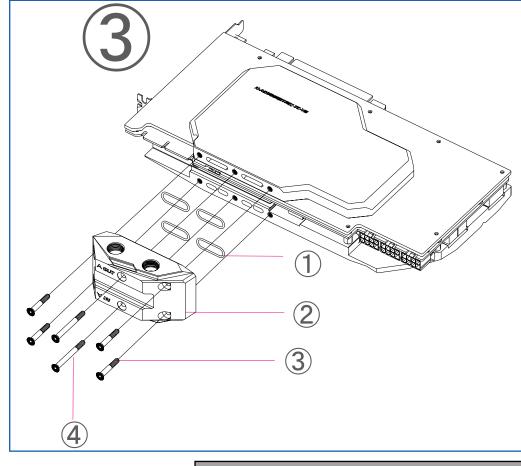

Step 3: Install the terminal (2) and secure it carefully with the M4X22mm screws (3) and the M4X35mm screws (4).

- 1. Sealing ring (already attached)
- 2. Terminal
- 3. M4X22mm screw
- 4. M4X35mm screw

www.ezmodding.com

-8-

SUPPORT AND SERVICE

In case you have any questions regarding our product or need assistance, please contact: <u>support@ezmodding.com</u>

You can also use our contact form: <u>https://ezmodding.com/contact</u>

Visit us o<mark>n:</mark>

f <u>https://www.facebook.com/ezmodding</u>

EZModding

www.ezmodding.com

www.ezmodding.com

-9-

IMPRINT

IMPKON GmbH & Co.KG Sabinastraße 30 45136 Essen Germany Telephone: 020189061993 E-Mail: support@ezmodding.com VAT No.: DE333294398 WEEE reg. no.: DE 41356332 Iisted in the commercial register of the local court Essen Commercial register number - Part A of the commercial register - 11139

Represented by the individually liable partner Impkon Verwaltungs GmbH Represented by the general manager Daniel Konrad, Tim Konrad Sabinastraße 30, 45136 Essen, Deutschland Listed in the commercial register of the local court Essen Commercial register number - Part B of the commercial register - 31069

-10-

WWW.EZMO